

 
# ASSEMBLY AND INSTALLATION INSTRUCTIONS

348-1431

**WARNING:** TO AVOID RISK OF ELECTRICAL SHOCK, BE SURE TO SHUT OFF POWER BEFORE INSTALLING OR SERVICING THIS FIXTURE.

- NOTES:**
1. Before installing, consult local electrical codes for wiring and grounding requirements.
  2. Customer Service: 1-800-887-6326 (weekdays 9 a.m. – 5 p.m. CST)
  3. READ AND SAVE THESE INSTRUCTIONS.

## Hardware Package (Included):



Chain (A)




Pull Chain (B)

## Important to Know


1. Read all instructions carefully before installation and operation.
2. If you are not familiar with state and local electrical codes, it is recommended that you consult with a qualified electrician.
3. Do not use in wet locations, use indoors only.
4. Non-replaceable LEDs.
5. Caution: LEDs emit bright light. Avoid looking directly into the light source for prolonged periods to avoid eye damage.
6. Not to be used with a dimming circuit or any other electronically controlled switch.

## 7. Specification:

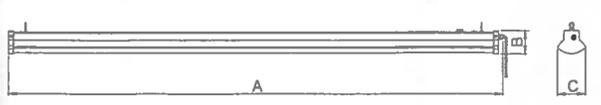NO.	Item #.	Dimension(inch)			Watts	
		A	B	C		
1	348-1431	48	2.25	2.75	50	

## Installation Steps

1. Select suitable location that can support the weight of the fixture and has an outlet on the ceiling to insure that the fixture hangs properly. Determine method of mounting before drilling. Make two spots on the ceiling 45 in. apart for the mounting hardware( not included).

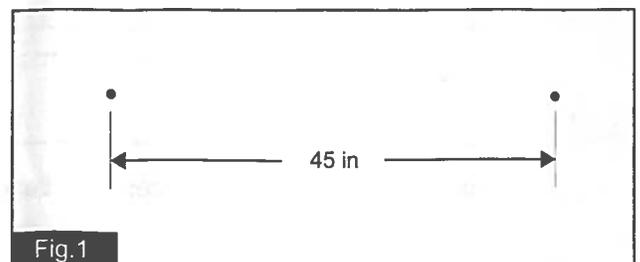

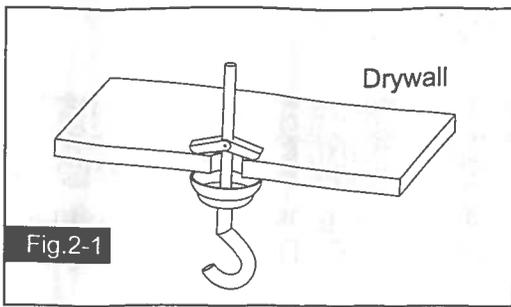


Fig.2-1

**2. For Mounting to Drywall:**

Drill 1/4 in. holes to the ceiling to clear the closed flaps of the toggle bolt. Make sure to fasten the toggle bolt into the butterfly nut before inserting the flaps into the ceiling with the toggle bolt protruding through the ceiling. Lock the assembly by screwing the hook into the ceiling.

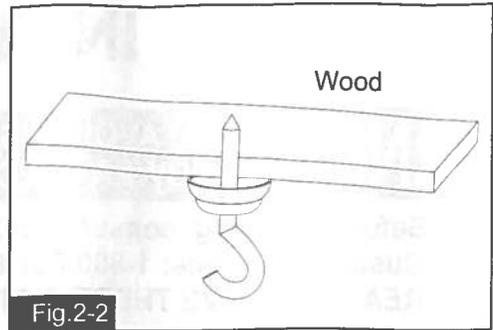


Fig.2-2

**For Mounting to Wood:**

Drill 1/16 in. diameter pilot hole in the ceiling. Make sure to fasten the combo wood-machine end into the metal hook screwing into ceiling to lock and tighten.

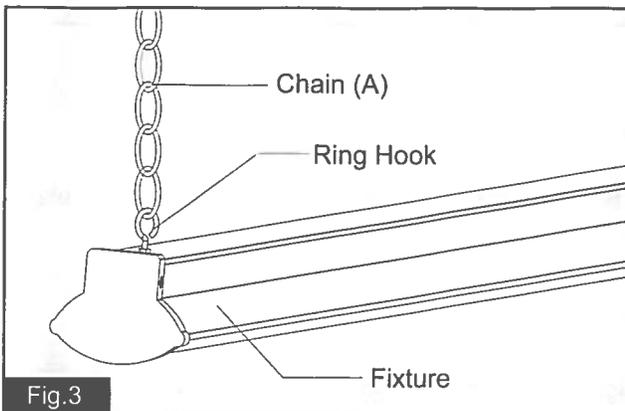


Fig.3

3. Install chain onto ring hook at each end of fixture.

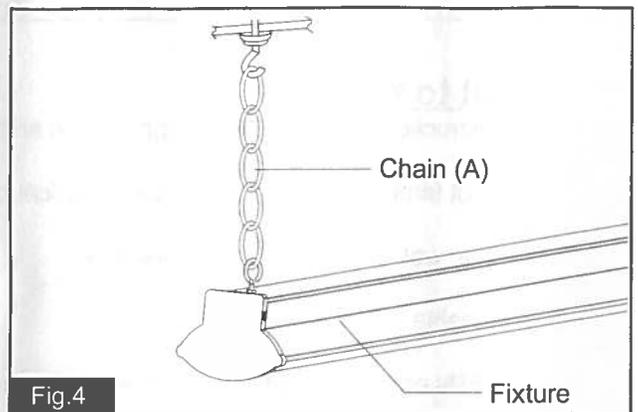


Fig.4

4. Hang fixture body by placing one chain over each hook that has been installed in the ceiling. You may need to adjust the chains slightly on the hooks for fixture to hang level. Fixture must hang at least 7.5 cm ( 3 in.) from ceiling.

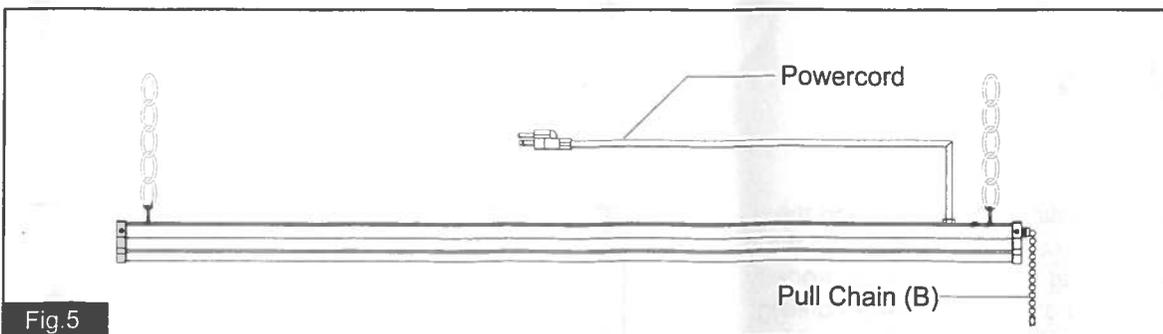


Fig.5

5. Insert powercord into ceiling duplex receptacle. Lengthen the pull chain with provided if necessary.

## Care and Maintenance


Periodically, dust the diffuser (outside) with a clean, dry cloth. Wipe clean with a slightly damp cloth as needed. Never use abrasive cleansers.

## Troubleshooting

PROBLEM	POSSIBLE CAUSE	CORRECTIVE ACTION
Light will not come ON	Pull chain is in "OFF" position	Pull chain switch so that it is in the "ON" position.

In case of damaged or missing parts, please call us toll-free at 1-800-887-6326

### Contents of Spare Parts:

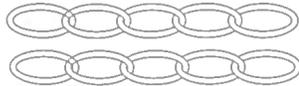

Coil Chain (A)  
3040CP(2 PCS)



Pull Chain (B)  
3039PU(1PC)

### 5-YEAR LIMITED WARRANTY:

This smart electrician fixture carries a limited warranty against defects in material or workmanship. If the smart electrician product fails at any time within five (5) years after the original date of sale due to defects in material or workmanship, return the product to Menards with the original sales receipt. At its discretion, smart electrician will replace the defective fixture with the same or similar fixture or issue a refund. This warranty and any implied warranty (including but not limited to any implied warranty of merchantability or fitness for a particular purpose) does not cover glass globes, light bulbs and other expendable items. This warranty excludes coverage of finish or color against tarnishing, flaking, and discoloration. If the original purchaser ceases to own the smart electrician product this warranty and any implied warranty will be void. This warranty does not cover damage caused by misuse or abuse, including but not limited to improper installation, improper usage, accident, negligence, unauthorized repair, unauthorized modifications, or unauthorized maintenance of the fixture. This warranty does not include reimbursement for inconvenience, installation, setup time, returned shipping charges or defects, losses, labor, injuries to personal property.

This warranty gives the consumer specific legal rights, and the consumer may have other rights which vary from state to state. The seller's employees are not qualified to advise on the use of the fixture. Any oral representations made will not be binding on seller or its employees.

For questions regarding this product, call toll-free at 1-800-887-6326.